# PD20X-XXX-XXX-B

INCLUDING: OPERATION, INSTALLATION & MAINTENANCE

PE20X-XXX-XXX-B()

RELEASED:

**REVISED:** (REV. 08)

1-13-12

# 2" DIAPHRAGM PUMP 1:1 RATIO (METALLIC)



# READ THIS MANUAL CAREFULLY BEFORE INSTALLING, OPERATING OR SERVICING THIS EQUIPMENT.

It is the responsibility of the employer to place this information in the hands of the operator. Keep for future reference.

#### **SERVICE KITS**

Refer to Model Description Chart to match the pump material op-

637309-XX for fluid section repair (see page 4). NOTE: This kit also contains several air motor seals which will need to be replaced. 637374-X major air valve assembly (see page 7).


637421 for air section repair (see page 6).

#### **PUMP DATA**


Models see Model Description Chart for "-XXX"
Pump Type Metallic Air Operated Double Diaphragm
Material see Model Description Chart
<b>Weight</b> PX20A-XAX-XXX-B()
PX20A-X <u>C</u> X-XXX-B() 147.4 lbs (66.9 kgs)
PX20A- <u>AH</u> X-XXX-B(), - <u>BH</u> X 155.0 lbs (70.3 kgs)
PX20A- <u>AS</u> X-XXX-B( ), - <u>BS</u> X 149.8 lbs (68.0 kgs)
PX20A- <u>FH</u> X-XXX-B() 169.4 lbs (76.8 kgs)
PX20A-FSX-XXX-B()162.0 lbs (73.5 kgs)
(add 28.9 lbs [13.1 kg] for stainless steel air motor section)
Maximum Air Inlet Pressure
Maximum Material Inlet Pressure 10 p.s.i.g. (0.69 bar)
Maximum Outlet Pressure
<b>Maximum Flow Rate</b>
<b>Displacement / Cycle @ 100 p.s.i.g.</b> 1.4 gal. (5.3 lit.)
Maximum Particle Size 1/4" dia. (6.4 mm)
Maximum Temperature Limits (diaphragm / ball / seal material)
E.P.R. / EPDM60° to 280° F (-51° to 138° C)
Hytrel®
Kynar® PVDF 10° to 200° F (-12° to 93° C)
Nitrile
Santoprene®40° to 225° F (-40° to 107° C)
PTFE 40° to 225° F (4° to 107° C)
Viton <sup>®</sup> 40° to 350° F (-40° to 177° C)
Dimensional Data see page 8
<b>Noise Level</b> @ 70 p.s.i., 60 c.p.m.① 85.0 db(A) ②

- ① Tested with 67263 muffler assembly installed.
- ② The pump sound pressure levels published here have been updated to an Equivalent Continuous Sound Level ( $L_{\mbox{\scriptsize Aeq}}$ ) to meet the intent of ANSI S1.13-1971, CAGI-PNEUROP S5.1 using four microphone locations.

NOTICE: All possible options are shown in the chart, however, certain combinations may not be recommended, consult a representative or the factory if you have questions concerning availability.

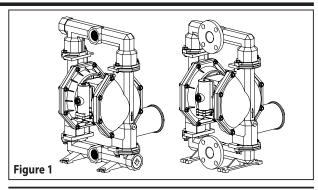

#### MODEL DESCRIPTION CHART

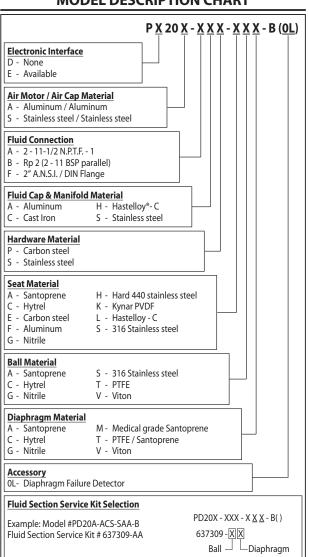



#### **OPERATING AND SAFETY PRECAUTIONS**

#### READ, UNDERSTAND AND FOLLOW THIS INFORMATION TO AVOID INJURY AND PROPERTY DAMAGE.



- WARNING EXCESSIVE AIR PRESSURE. Can cause personal injury, pump damage or property damage.
- Do not exceed the maximum inlet air pressure as stated on the pump model plate.
- Be sure material hoses and other components are able to withstand fluid pressures developed by this pump. Check all hoses for damage or wear. Be certain dispensing device is clean and in proper working condition.
- **MARNING** STATIC SPARK. Can cause explosion resulting in severe injury or death. Ground pump and pumping system.
- Use the pump grounding screw terminal provided. Use ARO® part no. 66885-1 ground kit or connect a suitable ground wire (12 ga. min.) to a good earth ground source.
- Secure pump, connections and all contact points to avoid vibration and generation of contact or static spark.
- Consult local building codes and electrical codes for specific grounding requirements.
- After grounding, periodically verify continuity of electrical path to ground. Test with an ohmmeter from each component (e.g., hoses, pump, clamps, container, spray gun, etc.) to ground to insure continuity. Ohmmeter should show 0.1 ohms or less.
- Submerse the outlet hose end, dispensing valve or device in the material being dispensed if possible. (Avoid free streaming of material being dispensed.)
- Use hoses incorporating a static wire.
- Use proper ventilation.
- Keep inflammables away from heat, open flames and sparks.
- Keep containers closed when not in use.
- WARNING Pump exhaust may contain contaminants. Can cause severe injury. Pipe exhaust away from work area and personnel.
- In the event of a diaphragm rupture, material can be forced out of the air exhaust muffler.
- Pipe the exhaust to a safe remote location when pumping hazardous or inflammable materials.
- Use a grounded 1" minimum i.d. hose between the pump and the muffler.
- WARNING HAZARDOUS PRESSURE. Can result in serious injury or property damage. Do not service or clean pump, hoses or dispensing valve while the system is pressurized.
- Disconnect air supply line and relieve pressure from the system by opening dispensing valve or device and / or carefully and slowly loosening and removing outlet hose or piping from pump.
- <u>^</u>WARNING HAZARDOUS MATERIALS. Can cause serious injury or property damage. Do not attempt to return a pump to the factory or service center that contains hazardous material. Safe handling practices must comply with local and national laws and safety code requirements.

- Obtain Material Safety Data Sheets on all materials from the supplier for proper handling instructions.
- WARNING EXPLOSION HAZARD. Models containing aluminum parts cannot be used with 1,1,1-trichloroethane, methylene chloride or other halogenated hydrocarbon solvents which may react and explode.
- Check pump motor section, fluid caps, manifolds and all wetted parts to assure compatibility before using with solvents of this type.
- WARNING MISAPPLICATION HAZARD. Do not use models containing aluminum wetted parts with food products for human consumption. Plated parts can contain trace amounts of lead.
- ▲ CAUTION Verify the chemical compatibility of the pump wetted parts and the substance being pumped, flushed or recirculated. Chemical compatibility may change with temperature and concentration of the chemical(s) within the substances being pumped, flushed or circulated. For specific fluid compatibility, consult the chemical manufacturer.
- ▲ CAUTION Maximum temperatures are based on mechanical stress only. Certain chemicals will significantly reduce maximum safe operating temperature. Consult the chemical manufacturer for chemical compatibility and temperature limits. Refer to PUMP DATA on page 1 of this manual.
- ▲ CAUTION Be certain all operators of this equipment have been trained for safe working practices, understand it's limitations, and wear safety goggles / equipment when required.
- CAUTION Do not use the pump for the structural support of the piping system. Be certain the system components are properly supported to prevent stress on the pump parts.
- Suction and discharge connections should be flexible connections (such as hose), not rigid piped, and should be compatible with the substance being pumped.
- CAUTION Prevent unnecessary damage to the pump. Do not allow pump to operate when out of material for long periods of time.
- Disconnect air line from pump when system sits idle for long periods of time.
- CAUTION Use only genuine ARO replacement parts to assure compatible pressure rating and longest service life.
- NOTICE Replacement warning labels are available upon request: "Static Spark & Diaphragm Rupture" pn \ 94080.

Page 2 of 8 PD20X-XXX-XXX-B (en)

#### GENERAL DESCRIPTION

The ARO diaphragm pump offers high volume delivery even at low air pressure and a broad range of material compatibility options are available. Refer to the model and option chart. ARO pumps feature stall resistant design, modular air motor / fluid sections.

Air operated double diaphragm pumps utilize a pressure differential in the air chambers to alternately create suction and a positive fluid pressure in the fluid chambers, valve checks insure a positive flow of fluid.

Pump cycling will begin as air pressure is applied and will continue to pump and keep up with the demand. It will build and maintain line pressure and will stop cycling once maximum line pressure is reached (dispensing device closed) and will resume pumping as needed.

### **AIR AND LUBE REQUIREMENTS**

# WARNING EXCESSIVE AIR PRESSURE. Can cause pump damage, personal injury or property damage.

- A filter capable of filtering out particles larger than 50 microns should be used on the air supply. There is no lubrication required other than the "O" ring lubricant which is applied during assembly or repair.
- If lubricated air is present, make sure that it is compatible with the "O" rings and seals in the air motor section of the pump.

#### **OPERATING INSTRUCTIONS**

- Always flush the pump with a solvent compatible with the material being pumped if the material being pumped is subject to "setting up" when not in use for a period of time.
- Disconnect the air supply from the pump if it is to be inactive for a few hours.
- The outlet material volume is governed not only by the air supply, but also by the material supply available at the inlet. The material supply tubing should not be too small or restrictive. Be sure not to use hose which might collapse.
- When the diaphragm pump is used in a forced-feed (flooded inlet) situation, it is recommended that a "check valve" be installed at the air inlet.
- Secure the diaphragm pump legs to a suitable surface to insure against damage by vibration.

#### PARTS AND SERVICE KITS

Refer to the part views and descriptions as provided on pages 4 through 7 for parts identification and service kit information.

- Certain ARO "Smart Parts" are indicated which should be available for fast repair and reduction of down time.
- Service kits are divided to service two separate diaphragm pump functions: 1. AIR SECTION, 2. FLUID SECTION. The Fluid Section is divided further to match typical part Material Options.

#### **MAINTENANCE**

- Provide a clean work surface to protect sensitive internal moving parts from contamination from dirt and foreign matter during service disassembly and reassembly.
- Keep good records of service activity and include the pump in preventive maintenance program.
- Before disassembling, empty captured material in the outlet manifold by turning the pump upside down to drain material from the pump.

#### **FLUID SECTION DISASSEMBLY**

- 1. Remove (61) outlet manifold and (60) inlet manifold.
- 2. Remove (22) balls, (19) "O" rings (if applicable) and (21) seats.
- 3. Remove (15) fluid caps.

NOTE: Only PTFE diaphragm models use a primary diaphragm (7) and a backup diaphragm (8). Refer to the auxiliary view in the Fluid Section illustration.

4. Remove the (6) diaphragm washer, (7) or 7 / 8) diaphragms and (5) backup washer.

NOTE: Do not scratch or mar the surface of (1) diaphragm rod.

#### **FLUID SECTION REASSEMBLY**

SERVICE NOTE: ARO pn 204214-T diaphragm assembly tool is recommended for use when reassembling the pump.

- Reassemble in reverse order. Refer to the torque requirements on page 5.
- Clean and inspect all parts. Replace worn or damaged parts with new parts as required.
- Lubricate (1) diaphragm rod and (144) "U" cups with Lubriplate® FML-2 grease (94276 grease packet is included in service kit).
- For models with PTFE diaphragms: Item (8) Santoprene diaphragm is installed with the side marked "AIR SIDE" towards the pump center body. Install the (7) PTFE diaphragm with the side marked "FLUID SIDE" towards the (15) fluid cap.
- Re-check torque settings after the pump has been re-started and run a while.

PD20X-XXX-XXX-B (en) Page 3 of 8

Hytrel® and Viton® are registered trademarks of the DuPont Company • Loctite® is a registered trademark of Henkel Loctite Corporation • Kynar® is a registered trademark of Arkema Inc. •
 Santoprene® is a registered trademark of Monsanto Company, licensed to Advanced Elastomer Systems, L.P. • ARO® is a registered trademark of Ingersoll-Rand Company •
 Lubriplate® is a registered trademark of Lubriplate Division (Fiske Brothers Refining Company) • 262™, 271™ and 572™ are trademarks of Henkel Loctite Corporation •

# PARTS LIST / PX20X-XXX-XXX-B() FLUID SECTION

• 637309-XX Fluid section service kit includes: Balls (see Ball Option, refer to -XX in chart below), Diaphragms (see Diaphragm Option, refer to -XX in chart below) and items 19, 70, 144, 175 (listed below) and 174 and 94276 Lubriplate FML-2 grease (page 6).

	SEAT OPTIONS PX20X-XXX- <u>X</u> XX-B()						SEAT OPTIONS PX20X-XXX-XXX-B()  BALL OPTIONS PX20X-XXX-XXX-B()											
	"21"						<b>0</b> "22" (2-1/2" diameter)						er)					
- <u>X</u> XX	Seat	Qty	Mtl		- <u>X</u> XX	Sitz	Qty	Mtl		-X <u>X</u> X	Ball	Qty	Mtl		-X <u>X</u> X	Ball	Qty	Mtl
-AXX	94328-A	(4)	[Sp]		-HXX	94354	(4)	[SH]		-XAX	93358-A	(4)	[Sp]		-XSX	94805	(4)	[SS]
-CXX	94328-C	(4)	[H]		-KXX	94477-K	(4)	[K]		-XCX	93358-C	(4)	[H]		-XTX	93358-4	(4)	[T]
-EXX	95677	(4)	[C]		-LXX	95639	(4)	[Ha]		-XGX	93358-2	(4)	[B]		-XVX	93358-3	(4)	[V]
-FXX	95673	(4)	[A]		-SXX	94353	(4)	[SS]										
-GXX	94328-G	(4)	[B]															

NOTE: Seat options -AXX, -CXX and -GXX do not require item 19 "O" ring.

	DIAPHRAGM OPTIONS PX20X-XXX-XXX-B()										
	Service kit	0 "7"			<b>0</b> "8"			<b>19"</b> (1/8" x 3-5/8" o.d.)			
-XX <u>X</u>	- <u>X</u> X = (Ball) -X <u>X</u> = (Diaphragm)	Diaphragm	Qty	Mtl	Diaphragm	Qty	Mtl	"O" Ring	Qty	Mtl	
-XXA	637309-XA	94329-A	(2)	[Sp]				94356	(4)	[E]	
-XXC	637309-XC	94329-C	(2)	[H]				Y327-237	(4)	[V]	
-XXG	637309-XG	94329-G	(2)	[B]				Y325-237	(4)	[B]	
-XXM	637309-XM	94329-M	(2)	[MSp]				Y328-237	(4)	[T]	
-XXT	637309-XT	94355-T	(2)	[T]	94330-A	(2)	[Sp]	Y328-237	(4)	[T]	
-XXV	637309-XV	95344	(2)	[V]				Y327-237	(4)	[V]	

MA	TERIAL C	ODE
[A] =	Aluminum	
[B] =	Nitrile	
[C] =	Carbon Stee	I
[Co] =	Copper	
[CI] =	Cast Iron	
[E] =	E.P.R.	
[H] =	Hytrel	
[Ha] =	Hastelloy - C	
[K] =	Kynar PVDF	
[MSp] :	= Medical g	rade Santo-
	prene	
[SH]=	Hard Stainle	ss Steel
[Sp] = 1	Santoprene	
[SS] =	Stainless Ste	el
[T] =	PTFE	
[V] = '	Viton	

	CENTER SECTION PART OPTIONS PX20X-XXX-XXX-B()									
			PD20 <u>A</u> -XXX-XX	PE20A-XXX-XX	(X-B()	PD20S-XXX-XXX-B()		PE20S-XXX-XXX-B(		
Item	Description (size)	Qty	Part No.	Mtl	Part No.	Mtl	Part No.	Mtl	Part No.	Mtl
5	Backup Washer	(2)	96503	[A]	96503	[A]	94357-2	[SS]	94357-2	[SS]
68	Air Cap	(1)	94324-1	[A]	94715-1	[A]	94349-1	[SS]	94349-1	[SS]
69	Air Cap	(1)	94324-2	[A]	94715-2	[A]	94349-2	[SS]	94349-2	[SS]
76	Pipe Plug (1/8 - 27 N.P.T. x 0.27")	(1)			Y17-50-S	[SS]			Y17-50-S	[SS]
126	Pipe Plug (1/4 - 18 N.P.T. x 7/16")	(2)			Y17-51-S	[SS]	Y17-51-S	[SS]	Y17-51-S	[SS]
131	Screw (M10 x 1.5 - 6g x 120 mm)	(4)	94531	[C]	94531	[C]	96656	[SS]	96656	[SS]
<b>0 2</b> 175	"O" Ring (3/32" x 1" o.d.)	(2)	Y325-117	[B]	Y325-117	[B]				
00	(3/32" x 1-1/16" o.d.)	(2)					Y325-118	[B]	Y325-118	[B]
181	Roll Pin (5/32" o.d. x 3/4" long)	(4)					Y178-56-S	[SS]	Y178-56-S	[SS]

	MANIFOLD THREAD / FLUID CAP MATERIAL OPTIONS PX20X-XXX-XXX-B( )													
			PX20X-X <u>A</u> X- P		PX20X-XC	PX20X-XCX-		PX20X-X <u>H</u> X-		<u>H</u> X-	PX20X-X <u>S</u> X-		PX20X-FSX-	
Item	Description (size)	Qty	Part No.	Mtl	Part No.	Mtl	Part No.	Mtl	Part No.	Mtl	Part No.	Mtl	Part No.	Mtl
6	Diaphragm Washer	(2)	96503	[A]	94357-2	[SS]	94357-3	[Ha]	94357-3	[Ha]	94357-2	[SS]	94357-2	[SS]
9	Washer	(2)	93065	[SS]	93065	[SS]	95683	[Ha]	95683	[Ha]	93065	[SS]	93065	[SS]
14	Screw (5/8" - 18 x 2-1/2")	(2)	Y5-111-T	[SS]	Y5-111-T	[SS]	95682	[Ha]	95682	[Ha]	Y5-111-T	[SS]	Y5-111-T	[SS]
15	Fluid Cap	(2)	94325	[A]	94346	[CI]	95679	[Ha]	95679	[Ha]	95570	[SS]	95570	[SS]
60	Inlet Manifold	(1)	94327-[❸]	[A]	94347-[❸]	[CI]	95680-[❸]	[Ha]	96341 <b>②</b>	[Ha]	95510-[❸]	[SS]	95512 <b>②</b>	[SS]
61	Outlet Manifold	(1)	94326-[❸]	[A]	94348-[ூ]	[CI]	95681-[❸]	[Ha]	96342 <b>②</b>	[Ha]	95511-[❸]	[SS]	95513 <b>②</b>	[SS]
63	Pipe Plug (2 - 11-1/2 N.P.T.)	(2)	Y17-128	[A]	Y17-28-C	[C]								
	R 2 (2 - 11 BSP, taper)	(2)	94439-2	[A]	94439-1	[C]								

	EXTERNAL HARDWARE OPTION PX20X-XXX-XXX-B()								
		PX20X-XX <u>P</u> -XX	(X-B()	PX20X-XX <u>S</u> -XXX-B()					
Item	Description (size)	Qty	Part No.	Mtl	Part No.	Mtl			
26	Screw (M10 x 1.5 - 6g x 34 mm)	(8)	94409-1	[C]	94409-2	[SS]			
27	Screw (M10 x 1.5 - 6g x 45 mm)	(16)	94990-1	[C]	94990	[SS]			
29	Nut (M10 x 1.5 - 6h)	(16)	94992-1	[C]	94992	[SS]			

	COMMON PARTS										
Item	Description (size)	Qty	Part No.	Mtl		Item	Description (size)				
1	Rod	(1)	94358	[C]		<b>0 0</b> 144	"U" Cup (3/16" x 1-3/8" o.d.)				
43	Ground Lug (see page 7)	(1)	93004	[Co]		<b>2</b> 180	Gasket (0.406" i.d. x 0.031" thick)				
<b>0 2</b> 70	Gasket	(2)	94100	[B]							

- Air motor kit parts, see pages 6 and 7.
  For N.P.T.F. thread models (PX20X-AXX-XXX-B) use "-1".
  For BSP thread models (PX20X-BXX-XXX-B) use "-2".

- **④** Flange models
- ❸ "Smart Parts", keep these items on hand in addition to the service kits for fast repair and reduction of down time.

Qty Part No.

(2) (4) 94098

Y186-51


Mtl

[B]

[Co]

Page 4 of 8 PD20X-XXX-XXX-B (en)

# PARTS LIST / PX20X-XXX-XXX-B( ) FLUID SECTION

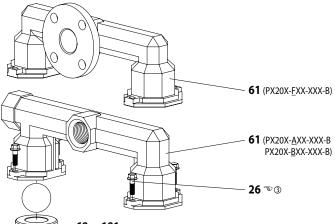

COLOR CODE								
Diaphragm Ball Material Color Color								
Cream	Cream							
Black	Red (•)							
Tan	Tan							
Green	N/A							
White	White							
Yellow (-) (-) Stripe	Yellow (•)							
	Diaphragm Color Cream Black Tan Green White Yellow (-)							

7 **Torque Sequence** 

FOR THE AIR MO-
TOR SECTION, SEE
PAGES 6 & 7.


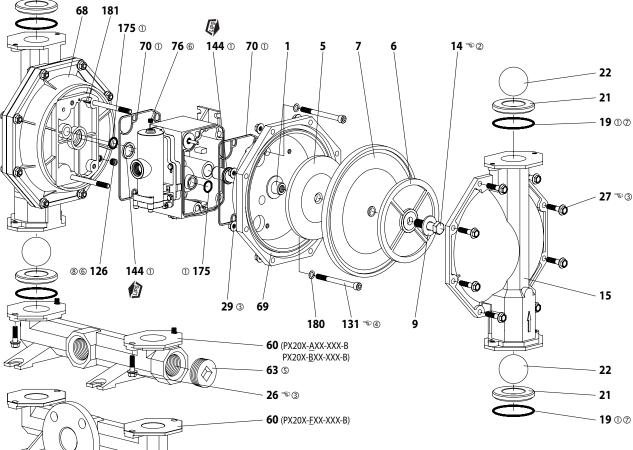


Figure 2

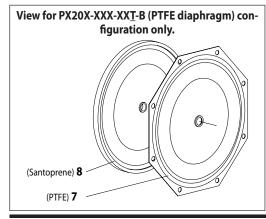

#### **☞ ASSEMBLY TORQUE REQUIREMENTS** ® NOTE: DO NOT OVERTIGHTEN FASTENERS.

ALL FASTENERS ARE METRIC.

(14) Diaphragm screw, 65 - 70 ft lbs (88.1 - 94.9 Nm).

(26) Screw, 30 - 40 ft lbs (40.7 - 54.2 Nm).

(27) Screw, 30 - 40 ft lbs (40.7 - 54.2 Nm).

(131) Screw, 35 - 40 ft lbs (47.5 - 54.2 Nm).

#### **LUBRICATION / SEALANTS**

- ① Apply Lubriplate FML-2 grease to all "O" rings, "U" cups and mating parts.
   ② Apply Loctite® 271™ to threads.
- 3 Apply anti-seize compound to threads and bolt and nut flange heads which contact pump case when using stainless steel fasteners.
- ④ Apply Loctite 262™ to threads at assembly.

- S Apply PTFE tape to threads.
   Apply Loctite 572™ to threads.
   Not used with PX20X-XXX-AXX-B, -CXX and -GXX.
- **® Not used with PX20X-XXX-XXX-B0L.**

Note: Lubriplate FML-2 is a white food grade petroleum grease.

PD20X-XXX-XXX-B (en) Page 5 of 8

### PARTS LIST / PX20X-XXX-XXX-B( ) AIR MOTOR SECTION

2 Indicates parts included in 637421 air section service kit shown below and items (70), (144), (175) and (180) shown on page 4.

	<u>'</u>						
			AIR	MO	TOR	PART	rs
Item	Description (size)	Qty	Part No.	Mtl		ltem	De
101	Center Body (PX20A-XXX-XXX-B)	(1)	94028	[A]		<b>9 2</b> 166	Tra
	(PX20 <u>S</u> -XXX-XXX-B)	(1)	94109	[SS]		<b>2</b> 167	Pil
103	Bushing	(1)	94092	[D]		168	"0
105	Screw (M6 x 1 - 6g x 20 mm)	(4)	95887	[SS]		169	"U
111	Spool	(1)	95651	[D]		170	Pis
118	Actuator Pin (0.250" x 2.276" long)	(2)	94083	[SS]		<b>2</b> 171	"0
121	Sleeve	(2)	94084	[D]		<b>②</b> 172	"0
127	90° St. Elbow (1-1/2 - 11-1/2 N.P.T.)	(1)	94860	[C / I]	1 [	<b>②</b> 173	"0
128	Set Screw (1/4" - 20 x 1/4")	(2)	Y29-42-S	[SS]		<b>D @</b> 174	"0
<b>②</b> 132	Gasket	(1)	94099	[B]		<b>2</b> 176	Dia
133	Lockwasher (1/4") (PX20A-XXX-XXX-B)	(3)	Y117-416-C	[C]		<b>②</b> 199	Tra
	(PX20 <u>S</u> -XXX-XXX-B)	(3)	Y14-416-T	[SS]		<b>2</b> 00	Ga
134	Screw (M6 x 1 - 6g x 30 mm)	(4)	96358	[SS]		201	Мι
135	Valve Housing (PD20A-XXX-XXX-B)	(1)	96334-1	[A]		233	Ad
	(PD20 <u>S</u> -XXX-XXX-B)	(1)	96337-1	[SS]			
	(PE20A-XXX-XXX-B)	(1)	96334-2	[A]		240	Sci
	(PE20S-XXX-XXX-B)	(1)	96337-2	[SS]		<b>2</b> 41	Tra
136	Plug (PX20A-XXX-XXX-B)	(1)	96335	[A]		<b>2</b> 42	"0
	(PX20 <u>S</u> -XXX-XXX-B)	(1)	96339	[SS]		<b>2</b> 43	"0
<b>2</b> 137	"O" Ring (1/16" x 2" o.d.)	(1)	Y325-32	[B]		<b>2</b> 244	"0
<b>2</b> 138	"U" Cup (3/16" x 1.792" o.d.)	(1)	95966	[B]			
<b>②</b> 139	"U" Cup (3/16" x 1-1/4" o.d.)	(1)	Y186-50	[B]		0 0	Lu
140	Valve Insert	(1)	95650	(Ck)			Lu
141	Valve Plate	(1)	95659	(Ck)		ltems i	nclu
<b>@ @</b> 146	"O" Ring (3/32" x 1-1/16" o.d.)	(1)	Y325-118	[B]		<b>3</b> Used o	
<b>@ @</b> 147	"O" Ring (1/8" x 1/2" o.d.)	(2)	Y325-202	[B]	· •	Used o	n m
	•				•		

МАЛТ	ERIAL	CODE
IVIAI	ENIAL	CODE

[A] = Aluminum [D] = Acetal [B] = Nitrile [I] = Iron [Br] = Brass [Sp] = Santog [C] = Carbon Steel [SS] = Stainle

[Ck] = Ceramic

[I] = Iron [Sp] = Santoprene [SS] = Stainless Steel [U] = Polyurethane

#### **AIR MOTOR SECTION SERVICE**

Service is divided into two parts - 1. Pilot Valve, 2. Major Valve. GENERAL REASSEMBLY NOTES:

- Air Motor Section service is continued from Fluid Section repair.
- Inspect and replace old parts with new parts as necessary. Look for deep scratches on metallic surfaces, and nicks or cuts in "O" rings.
- Take precautions to prevent cutting "O" rings upon installation.
- Lubricate "O" rings with Lubriplate FML-2 grease.
- Do not over-tighten fasteners. Refer to torque specification block on view.
- Re-torque fasteners following restart.
- SERVICE TOOLS To aid in the installation of (168) "O" rings onto the (167) pilot piston, use tool # 204130-T, available from ARO.

#### **PILOT VALVE DISASSEMBLY**

- 1. A light tap on (118) actuator pin should expose the opposite (121) sleeve, (167) pilot piston and other parts.
- 2. Remove (170) sleeve. Inspect inner bore of sleeve for damage.

## **PILOT VALVE REASSEMBLY**

- 1. Clean and lubricate parts not being replaced from service kit.
- 2. Install new (171 and 172) "O" rings. Replace (170) sleeve.

Item	Description (size)	Qty	Part No.	Mtl
<b>99</b> 166	Track Gasket	(1)	94026	[B]
<b>2</b> 167	Pilot Piston (includes 168 and 169)	(1)	67164	[D]
168	"O" Ring (3/32" x 5/8" o.d.)	(2)	94433	[U]
169	<b>"U" Cup</b> (1/8" x 7/8" o.d.)	(1)	Y240-9	[B]
170	Piston Sleeve	(1)	94081	[Br]
<b>2</b> 171	"O" Ring (3/32" x 1-1/8" o.d.)	(1)	Y325-119	[B]
<b>②</b> 172	"O" Ring (1/16" x 1-1/8" o.d.)	(1)	Y325-22	[B]
<b>2</b> 173	"O" Ring (1/16" x 1-3/8" o.d.)	(2)	Y325-26	[B]
<b>0 2</b> 174	"O" Ring (1/8" x 1/2" o.d.)	(2)	Y325-202	[B]
<b>2</b> 176	Diaphragm (check valve)	(2)	94102	[Sp]
<b>2</b> 199	Track Gasket	(1)	95666	[B]
<b>2</b> 200	Gasket	(1)	95665	[B]
201	Muffler Kit (includes item 127)	(1)	67213	
233	Adapter Plate (PX20A-XXX-XXX-B)	(1)	96336	[A]
	(PX20 <u>S</u> -XXX-XXX-B)	(1)	96338	[SS]
240	Screw (M6 x 1 - 6g x 16 mm)	(2)	95991	[SS]
<b>2</b> 241	Track Gasket	(1)	96344	[B]
<b>2</b> 242	"O" Ring (1/16" x 7/32" o.d.)	(1)	Y325-5	[B]
<b>2</b> 243	"O" Ring (1/8" x 5/8" o.d.)	(1)	Y325-204	[B]
<b>2</b> 244	"O" Ring (1/8" x 7/8" o.d.)	(1)	Y325-208	[B]
0 0	Lubriplate FML-2 grease	(1)	94276	
	Lubriplate Grease Packets (10)		637308	

- Items included in fluid section service kit, see pages 4 and 5.
- **6** Used on models PX20<u>S</u>-XXX-XXX-B() only.
- **⊘** Used on models PX20<u>A</u>-XXX-XXX-B() only.
- 3. Install new (168) "O" rings and (169) seal Note the lip direction. Lubricate and replace (167) pilot piston.
- 4. Reassemble remaining parts. Replace (173 and 174) "O" rings.

#### **MAJOR VALVE DISASSEMBLY**


- 1. Remove (135) valve block and (233) adapter plate, exposing (132 and 166) gaskets and (176) checks.
- Remove (233) adapter plate, releasing (140) valve insert, (141) valve plate, (199, 200 and 241) gaskets and (243 and 244) "O" rings.
- 3. Remove (136) plug and (137) "O" ring, releasing (111) spool.

#### **MAJOR VALVE REASSEMBLY**

- Install new (138 and 139) "U" cups on (111) spool LIPS MUST FACE EACH OTHER.
- 2. Insert (111) spool into (135) valve block.
- 3. Install (137 and 242) "O" rings on (136) plug and assemble plug to (135) valve block, securing with (105) screws.
- 4. Install (140) valve insert, (141) valve plate, (199) gasket and (243 and 244) "O" rings into (135) valve block. NOTE: Assemble (140) valve insert with "dished" side toward (141) valve plate. Assemble (141) valve plate with part number identification toward (140) valve insert.
- 5. Assemble (200 and 241) gaskets and (233) adapter plate to (135) valve block, securing with (240) screws.
- 6. Assemble (132 and 166) gaskets and (176) checks to (101) center body.
- Assemble (135) valve block and components to (101) center body, securing with (134) screws.

Page 6 of 8 PD20X-XXX-XXX-B (en)

# PARTS LIST / PX20X-XXX-XXX-B() AIR MOTOR SECTION

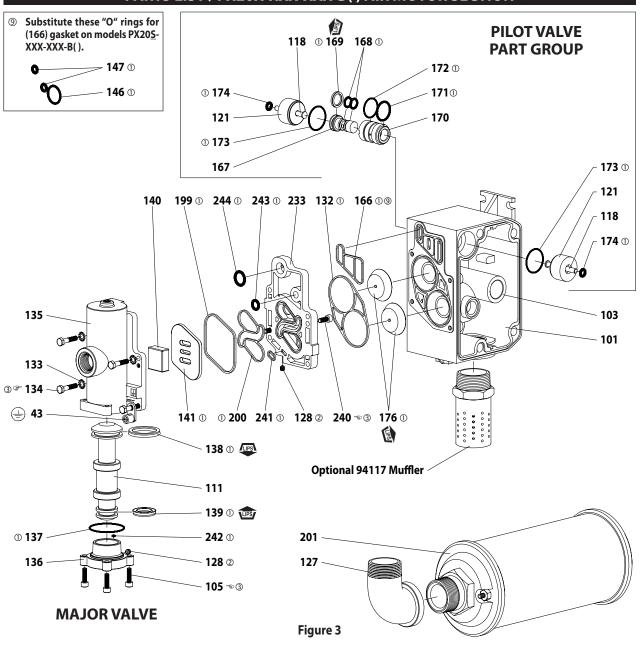

# ✓ ASSEMBLY TORQUE REQUIREMENTS NOTE: DO NOT OVERTIGHTEN FASTENERS. ALL FASTENERS ARE METRIC. ✓ OVERTIGHTEN FASTENERS. ALL FASTENERS ARE METRIC. ✓ OVERTIGHTEN FASTENERS. ✓ OVERTIGHTEN FASTE

(105) Screw, 40 - 50 in. lbs (4.5 - 5.6 Nm). (134) Screw, 40 - 50 in. lbs (4.5 - 5.6 Nm).

(240) Screw, 40 - 50 in. lbs (4.5 - 5.6 Nm).

#### **LUBRICATION / SEALANTS**

- Apply Lubriplate FML-2 grease to all "O" rings, "U" cups and mating parts.
- ② Apply Loctite 271 to threads.
- ③ Apply anti-seize compound to threads and bolt and nut flange heads which contact pump case when using stainless steel fasteners.

A replacement major valve service assembly is available separately, which includes the following:

- 637374-2 for models PD20A-XXX-XXX-B: 105 (4), 111, 128 (2), 132, 133 (3), 134 (4), 135, 136, 137, 138, 139, 140, 141, 166, 176 (2), 199, 200, 233, 240 (2), 241, 242, 243 and 244.
- 637374-3 for models PE20<u>A</u>-XXX-XXX-B: 76, 105 (4), 111, 128 (2), 132, 133 (3), 134 (4), 135, 136, 137, 138, 139, 140, 141, 166, 176 (2), 199, 200, 233, 240 (2), 241, 242, 243 and 244.
- 637374-4 for models PD20<u>S</u>-XXX-XXX-B: 105 (4), 111, 128 (2), 132, 133 (3), 134 (4), 135, 136, 137, 138, 139, 140, 141, 146, 147, 176 (2), 199, 200, 233, 240 (2), 241, 242, 243 and 244.
- 637374-5 for models PE20<u>S</u>-XXX-XXX-B: 76, 105 (4), 111, 128 (2), 132, 133 (3), 134 (4), 135, 136, 137, 138, 139, 140, 141, 146, 147, 176 (2), 199, 200, 233, 240 (2), 241, 242, 243 and 244.

PD20X-XXX-XXX-B (en) Page 7 of 8

#### **TROUBLE SHOOTING**

#### Product discharged from exhaust outlet.

- Check for diaphragm rupture.
- Check tightness of (14) diaphragm screw.

#### Air bubbles in product discharge.

- Check connections of suction plumbing.
- Check "O" rings between intake manifold and inlet side fluid caps.
- Check tightness of (14) diaphragm screw.


#### Motor blows air or stalls.

- Check (176) check valve for damage or wear.
- Check for restrictions in valve / exhaust.

#### Low output volume, erratic flow or no flow.

- Check air supply.
- Check for plugged outlet hose.
- Check for kinked (restrictive) outlet material hose.
- Check for kinked (restrictive) or collapsed inlet material hose.
- Check for pump cavitation suction pipe should be sized at least as large as the inlet thread diameter of the pump for proper flow if high viscosity fluids are being pumped. Suction hose must be a non-collapsing type, capable of pulling a high volume.
- Check all joints on the inlet manifolds and suction connections.
   These must be air tight.
- Inspect the pump for solid objects lodged in the diaphragm chamber or the seat area.

#### **DIMENSIONAL DATA**

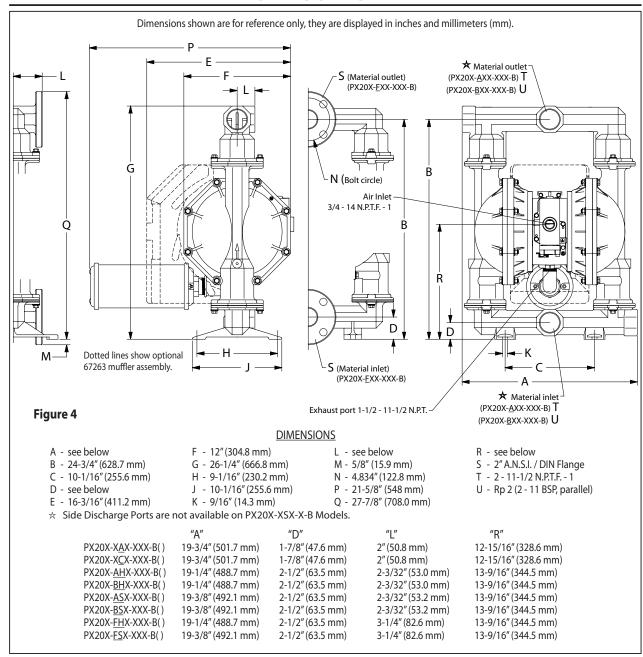



Page 8 of 8 PD20X-XXX-XXX-B (en)